


227 Kirkwood Ave lowa City, IA 52240

319-338-9711


www.aerorental.com

Layout the tent at the exact location of desired finished assembly. <u>Make sure you are aware of all the underground and overhead utilities</u> and electrical wires.


Pound a stake 5' out from the tent as you see in the image below. (The white tent poles are 7' long so you can use that as a guide.)

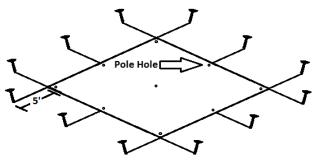


At the end of each rope, there are rope slides that make a loop. Place the loop around all of the stakes and leave them loose.

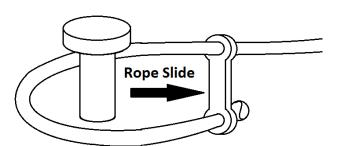


Start at one corner and insert the tip of the pole into the pole hole. (A pole hole is shown in the 1<sup>st</sup> image). Raise the pole until it is upright and tighten both ropes by pulling the rope slides upward. Continue with all 4 corners. Only the corners will have 2 ropes to tighten.

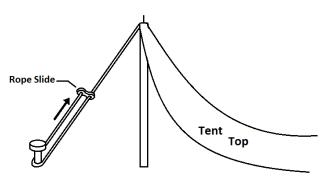

With all 4 corners up, take the center pole and place it in the hole in the peak and push up until it is straight up and down. Place the remaining white poles around the tent and tighten with the rope slides.

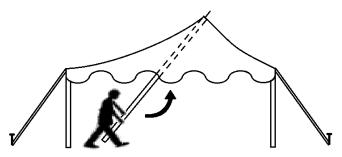

Take the small ropes (jump ropes) that hang by the top of all the poles including the center pole and wrap them around the poles and tie them off. This holds the tent top tight to the poles in case of strong winds.

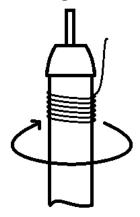

The tent should be up in place. Go around and make sure all of tent ropes and jump ropes are tight. Enjoy your event!

